




---

Output Command  
**Switch to Backup String**

Uplink Status in state failed	T
Previous Value of Uplink Status in state OK	T

---

**Timer Mode**

= Active

MPL Phase in state Cruise	T	
MPL Phase in state Landed		T
Command was Received		T
Last Value of Timer Mode in mode Inactive		T

= Inactive

MPL in state EDL	T	
Startup		T

---

**Uplink Status**

= OK

MPL Phase in state Cruise	T	
MPL Phase in state Landed		T
Time since Command was Last Received <= 24 hours	T	T
Timer Mode in mode Active	T	T

= Failed

MPL Phase in state Cruise	T	
MPL Phase in state Landed		T
Time since Command was Last Received > 24 hours	T	T
Timer Mode in mode Active	T	T